

ASSEMBLY INSTRUCTION

ITEM NO: 2510F / 2510WHF-1 FULL HEADBOARD
 2510F / 2510WHF-2 FULL FOOTBOARD W/SLAT
 2510T / 2510WHT-3 TWIN / FULL RAILS


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

TOOLS REQUIRED (NOT PROVIDED)

SCREWDRIVER (NOT PROVIDED)




PART LIST

NO	DESCRIPTION	SKETCH	Q'TY
A	HEADBOARD		1PC
B	FOOTBOARD		1PC
C	SIDE RAIL		2PCS
D	SLAT 13 PCS/LATTES		1SET
E	SUPPORT LEG (281 * 28 * 28mm)		9PCS

HARDWARE LIST

NO	DESCRIPTION	SKETCH	Q'TY
2510T-2			
1	SCREW #4*32mm		26PCS
2	THREAD BOLT (Ø5/16"*76mm)		8PCS
3	CURVED WASHER (Ø5/16")		8PCS
4	HEXAGONAL NUT (Ø5/16")		8PCS
5	SPANNER WRENCH (12mm)		1PC

STEP 1

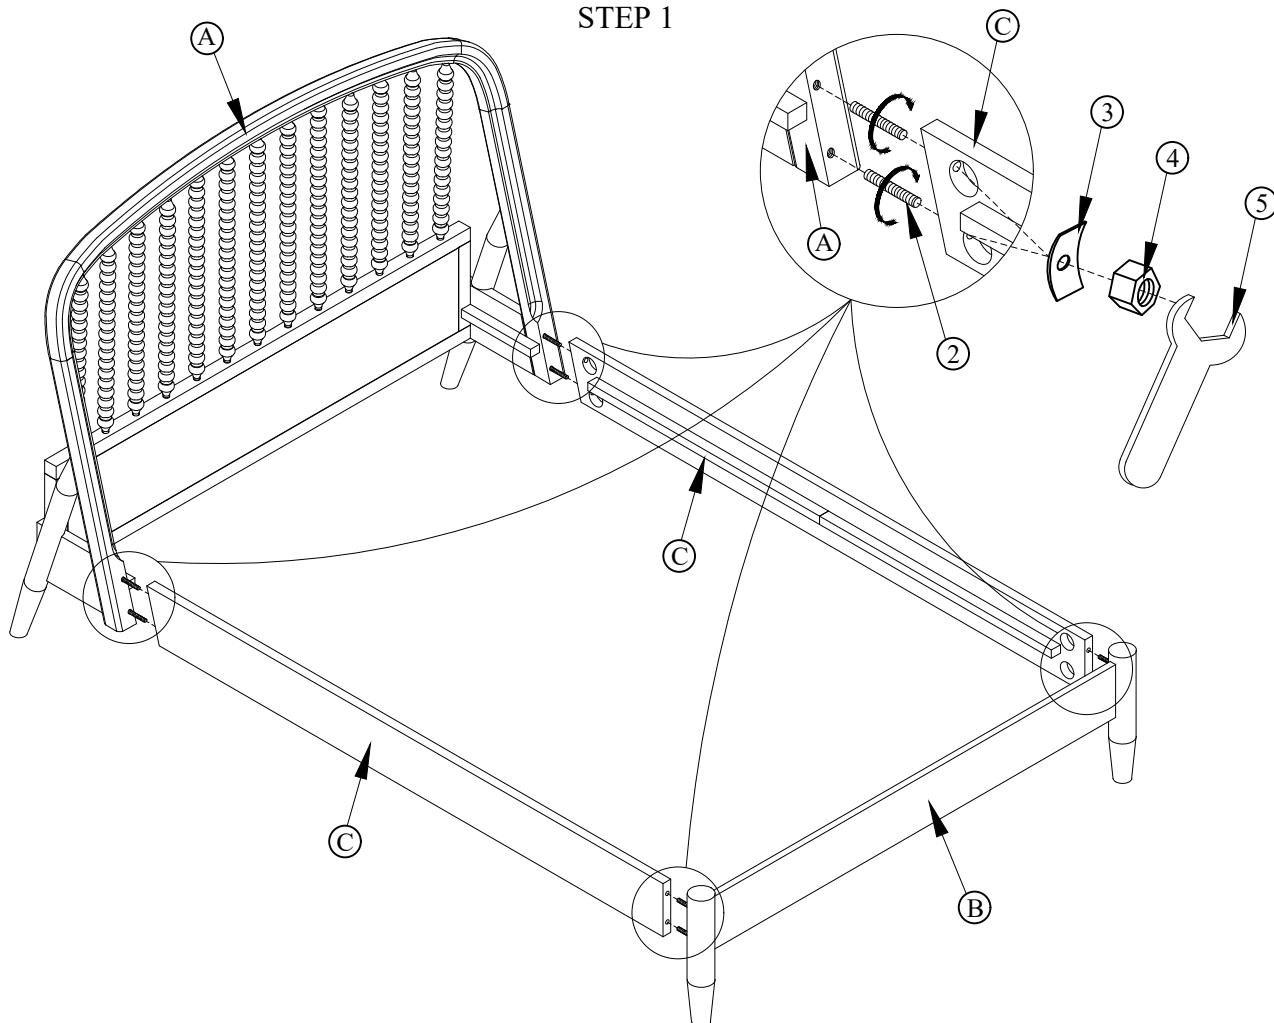

It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

MADE IN VIETNAM

PAGE: 1 OF 2

ASSEMBLY INSTRUCTION


ITEM NO: 2510F / 2510WHF-1 FULL HEADBOARD

2510F / 2510WHF-2 FULL FOOTBOARD W/SLAT


2510T / 2510WHT-3 TWIN / FULL RAILS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

STEP 2

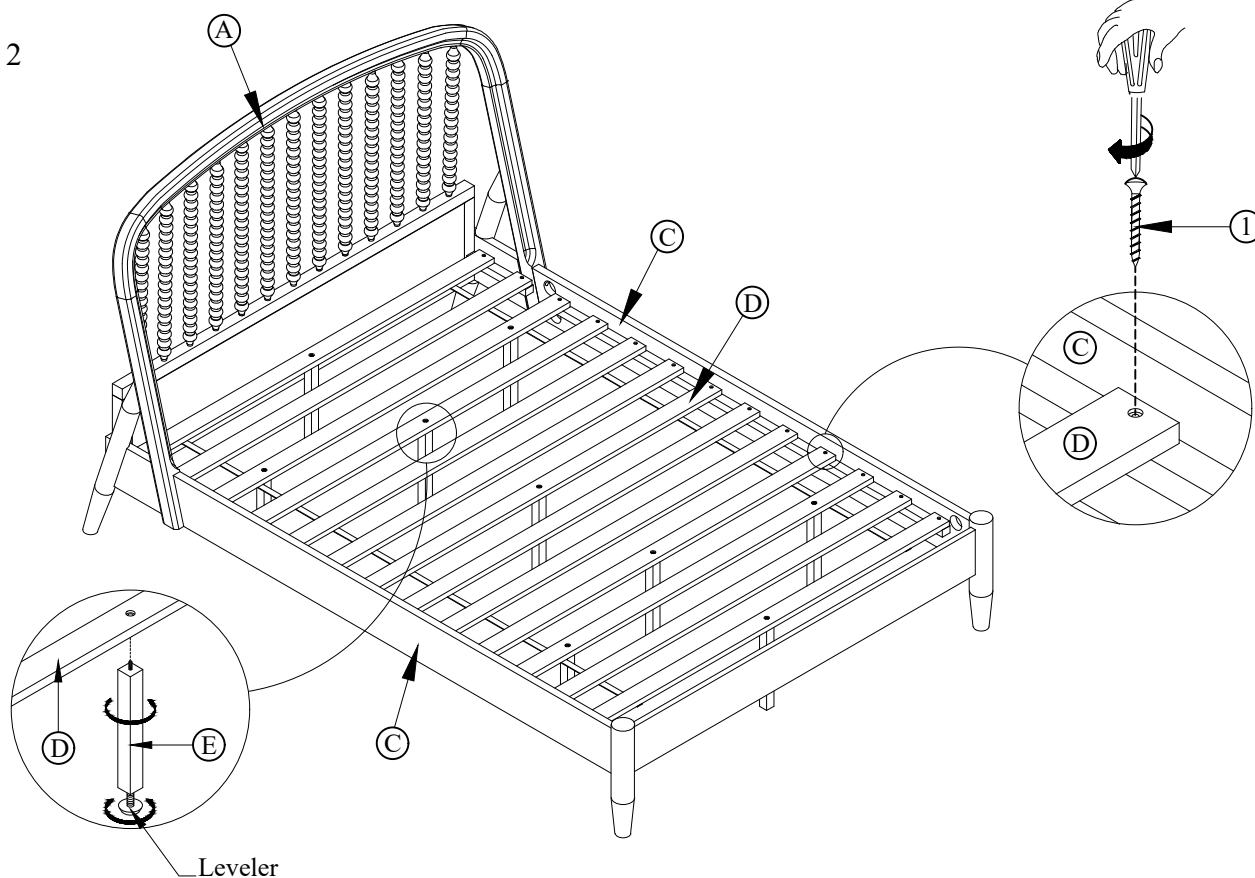

COMPLETED

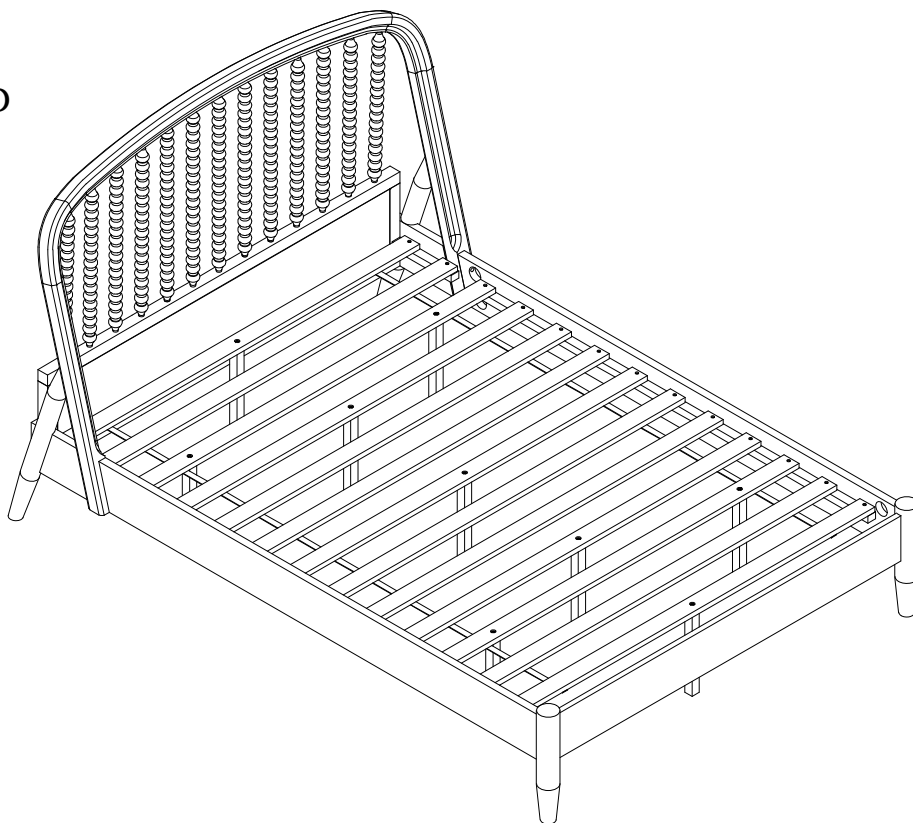

It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.