




ASSEMBLY INSTRUCTION
INSTRUCTION D' ASSEMBLAGE

ITEM NO: 6144S
SIDE CHAIR

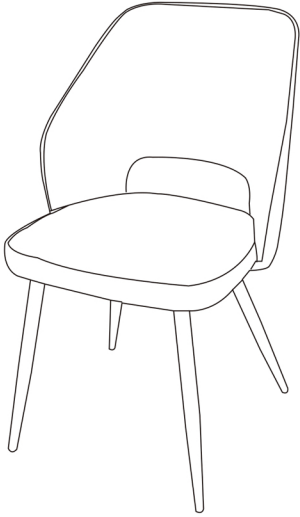

Thank you for purchasing this product. Please take time to read and follow instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in packing materials. If you do not have all parts listed, call us and they be sent to you immediately
Merci d'avoir acheté ce produit. Veuillez lire et suivre les instructions ci-dessous. Vérifiez avant le montage que vous avez toutes les pièces et fixations. Les pièces qui semblent manquer se trouvent souvent dans les matériaux d'emballage. Si vous n'avez pas toutes les pièces de la liste,demandez à votre détaillant et nous vous les enverrons immédiatement.

It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.


Il est recommandé de placer des coussins protecteurs sous tous les pieds et toutes les bases des meubles pour éviter d'endommager ou d'égratigner les planchers en bois ou autres surfaces dures, et pour limiter l'empreinte et empêcher la décoloration quand les meubles reposent sur la moquette.

PARTS LIST / LISTE DE PIECES			
NO.	SKETCH/ ESQUISSER	DESCRIPTION/ LA DESCRIPTION	Q'TY/ Q'TÉ
A		BACKREST / RESPALDO	1PC
B		UPPER LEG / Sur les a avant	1PC
C		LOWER LEG / Les avant sous	1PC

HARDWARE LIST / LISTE DE QUINCAILLERIE				
NO	DESCRIPTION/ LA DESCRIPTION	SIZE/ TAILLE	SKETCH/ ESQUISSER	Q'TY/ Q'TÉ
1	BOLT / BOULON	M6x45mm		4PCS
2	FLAT WASHER / RONDELLE PLATE	Ø18*Ø6*1.5mm		4PCS
3	BOLT / BOULON	M6x13mm		4PCS
4	CROSS-SHAPED CONNECTING PLATE	T3x80x15mm		1PC
5	ALLEN KEY / CLÉ ALLEN	M5		1PC

** ABOVE HARDWARE ARE PACKED IN #6144S FOR ASSEMBLY.
LE MATERIEL CI-DESSUS EST EMBALLE DANS #6144S POUR L'ASSEMBLAGE


Step 1/
Étape 1

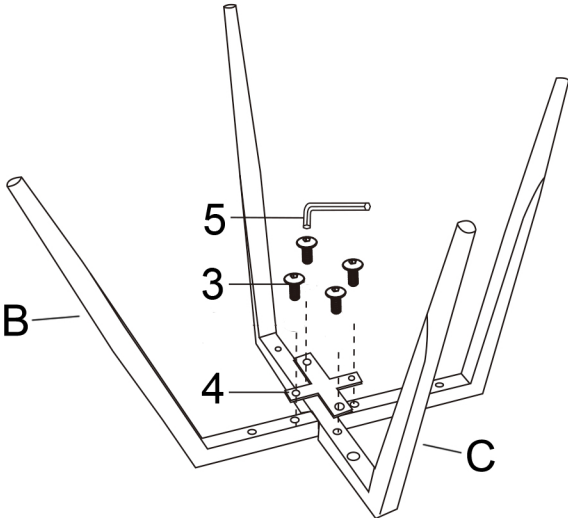


DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.
NE PAS SERRER LES BOULONS JUSQU'À CE QUE LE MONTAGE SOIT COMPLETMENT TERMINE
HARDWARE MAY LOOSEN OVER TIME. PERIODICALLY CHECK TO MAKE SURE ALL CONNECTIONS ARE TIGHT.
RE-TIGHTEN IF NECESSARY.
MADE IN CHINA / FABRIQUÉ EN CHINE

PAGE 1 of 2 / Pade 1 sur 2

Step 2/
Étape 2

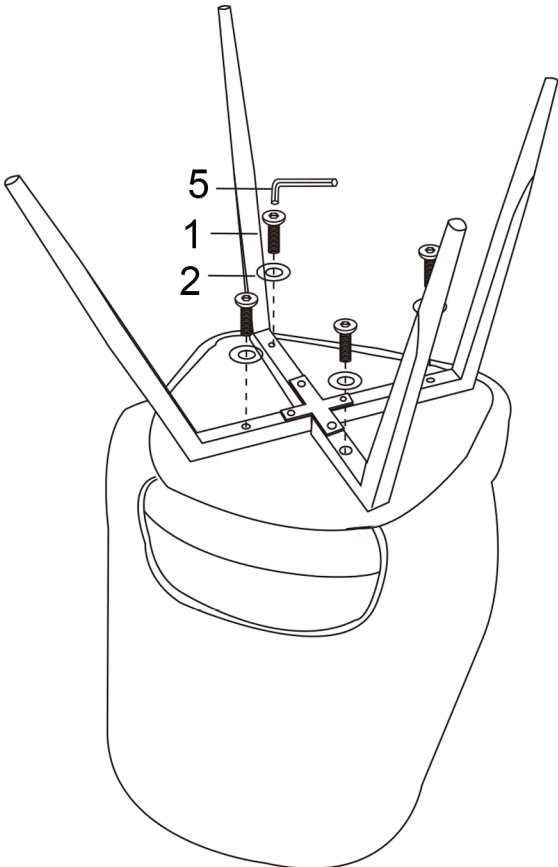

Step 3/
Étape 3

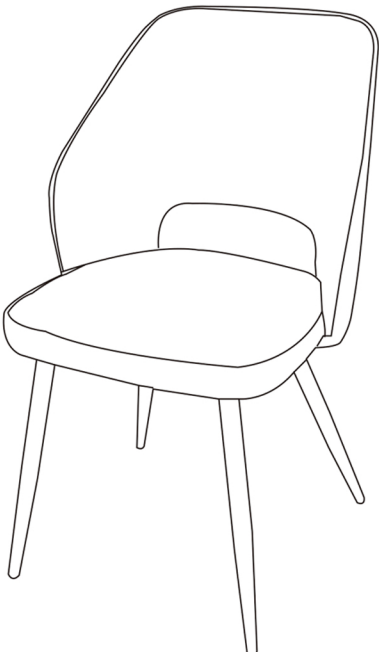

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.
NE PAS SERRER LES BOULONS JUSQU'À CE QUE LE MONTAGE SOIT COMPLETMENT TERMINE
HARDWARE MAY LOOSEN OVER TIME. PERIODICALLY CHECK TO MAKE SURE ALL CONNECTIONS ARE TIGHT.
RE-TIGHTEN IF NECESSARY.
MADE IN CHINA / FABRIQUÉ EN CHINE

ASSEMBLY COMPLETED /
ASSEMBLAGE COMPLETÉ

PAGE 2 of 2 / Pade 2 sur 2