





Assembly Instruction  
ITEM NO. 8238-AC

ARMLESS CHAIR


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

PARTS LIST

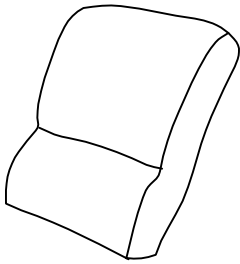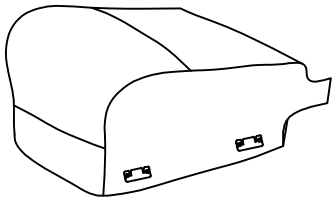
NO.	DRAWING	QTY	DESCRIPTION
A	 A line drawing of the back rest of the chair, showing a curved, padded shape with a horizontal seam across the middle.	1	BACK REST
B	 A line drawing of the seat of the chair, showing a rectangular shape with rounded corners and two small rectangular cutouts on the front edge.	1	SEAT

Please follow the drawings below to assemble the item.

Step 1. Align the female brackets at the back onto the male brackets at the seat, insert and push to the end, make sure the brackets are secured in position.

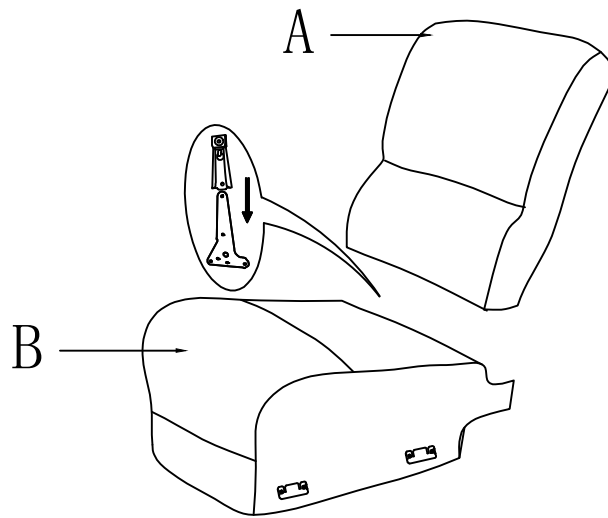

Step 2. Completed.

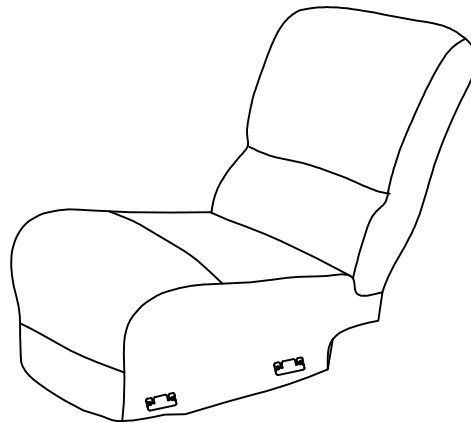

## CARE INSTRUCTION FOR 100% POLYESTER FURNITURE:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage 100% polyester
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime buildup.
- Wipe the 100% polyester with professional cleanser.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.